

700 and 800 Series Fog and Auxiliary Bulbs

Precision built to ANSI standards • Finest OEM quality
Long Life in demanding situations

Candlepower 700 and 800 series bulbs are built to last in fog lamps and driving lamps. They're precision engineered and built under strict German supervision to our rigid OEM quality standards, using only the best materials. Many bulbs in this series are physically but not electrically interchangeable. Serious damage and blinding glare result from using the wrong bulb, so it's important to use only the bulb specified for each application. At **Candlepower**, we carefully control the wattage and light output of our bulbs so you can be sure they not only fit, they match.

Tech tip: Our 796 bulb is the perfect drop-in fix for weak backup lights that use metal base bulbs such as 1156, 1141, 1073 or P21W. It provides much more light and won't cause dangerous overheating or overloading.

Type	Watts	Base	Hours	Notes
795	50	BA15s	1000	Transverse filament
796	35	BA15s	1200	Transverse filament
795X	50	BA15s	1000	Axial filament
862	37.5	PGJ13	1100	Clear top
880	27	PG13	300	Black top
881	27	PGJ13	300	Black top
884	27	PG13	300	Clear top
885	50	PG13	200	Clear top
886	50	PGJ13	200	Clear top
889	27	PGJ13	300	Clear top
890	27	PG13	300	Clear top
891	8	PG4	500	Clear top
892	16	PG13	300	Clear top
893	37.5	PG13	200	Black top
894	37.5	PGJ13	200	Clear top
896	37.5	PGJ13	200	Black top
898	37.5	PGJ13	1100	Black top
899	37.5	PG13	1100	Black top

Fog & Auxiliary Bulbs


795	795X	796
862	884	880
881	885	886
889	890	891
892	893	894
896	898	899




795/796




795X

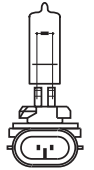


862/886/894

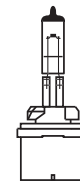


880

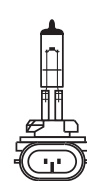


881

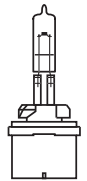


884

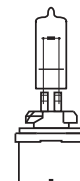

885

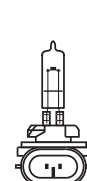


889

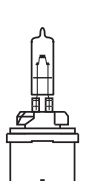


890




891

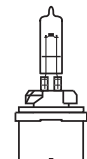

892

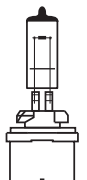

893/899

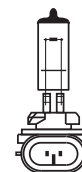

896/898



Candlepower Incorporated
14626 Southlawn Lane
Rockville, Maryland, USA
20850-1317

ph 301.340.0224
fax 301.762.2518
www.candlepowerinc.com